





- (FR) Dérivation moulure d'angle
- (GB) Corner trunking adaptor
- (DE) Anbindung an Eckkanal

- Montageanleitung
- Notice d'instructions
- Bruksanvisning


6J 8001.c

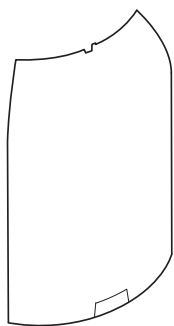


M5560

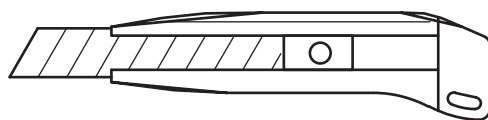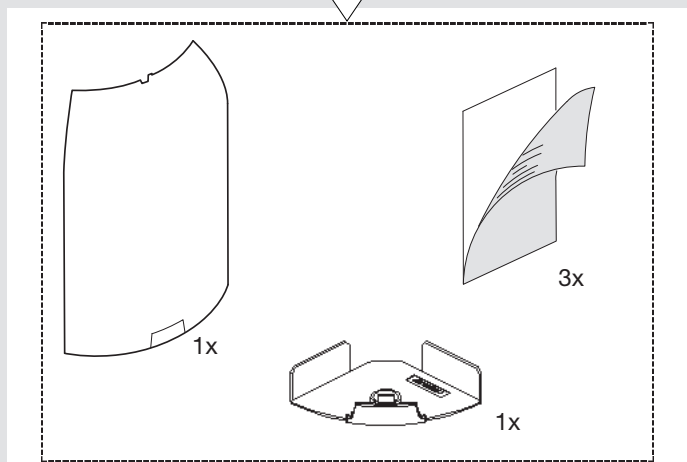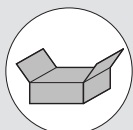


①

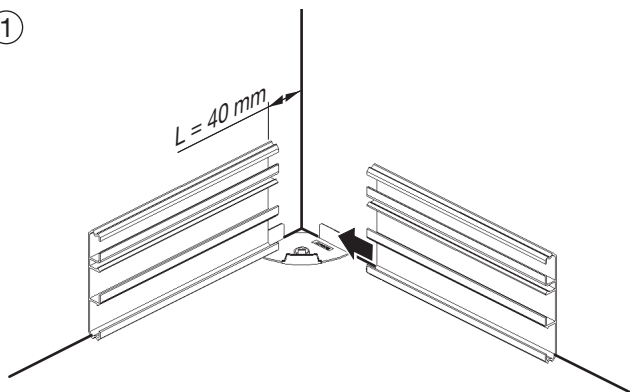

②

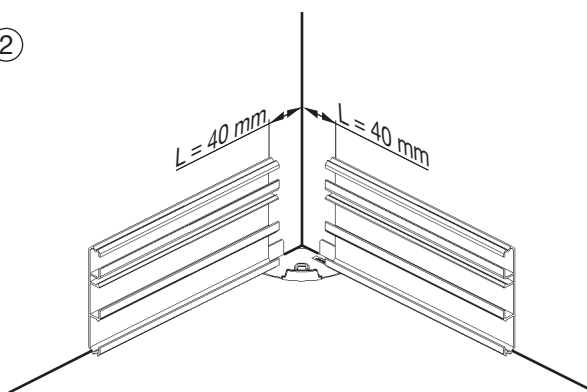


③

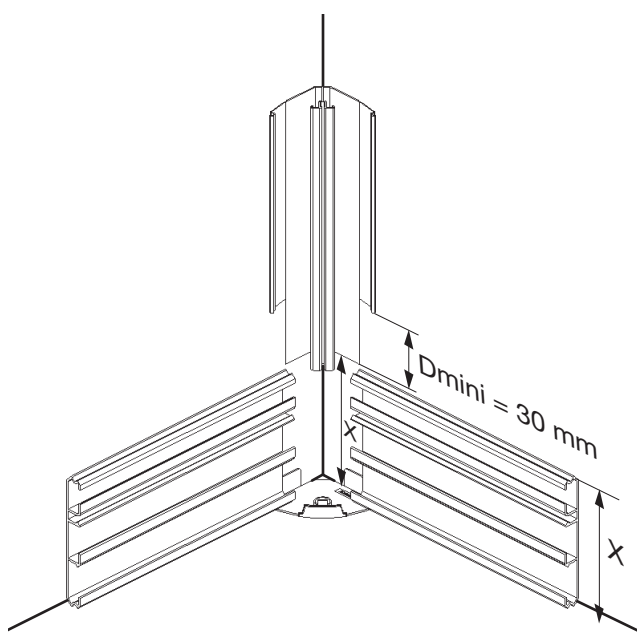


L 4080



④

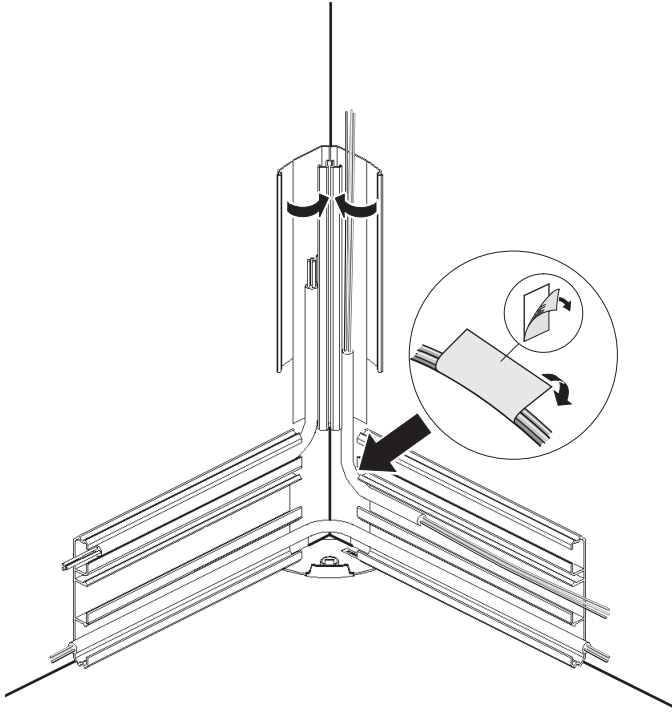

⑤

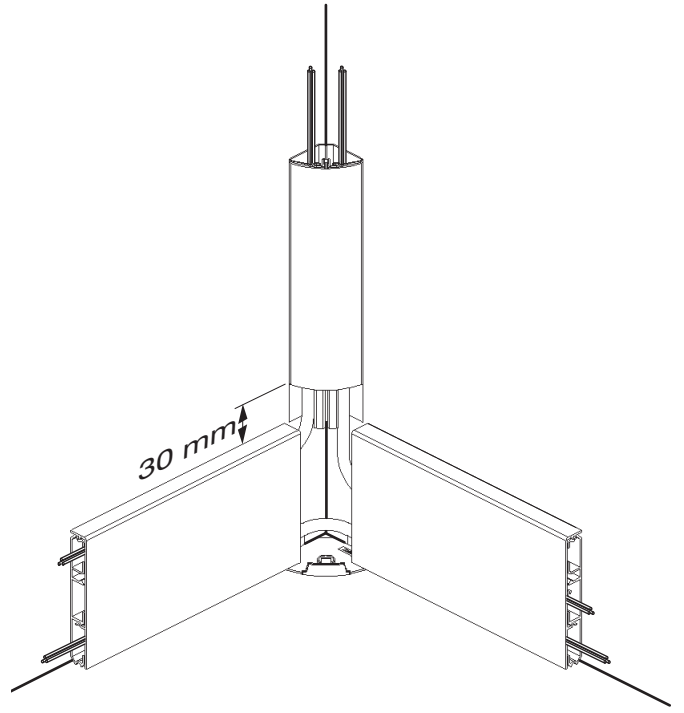

⑥

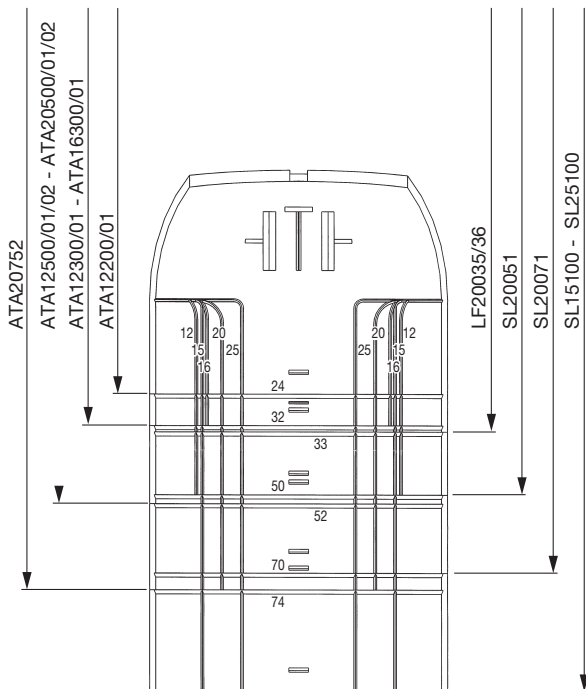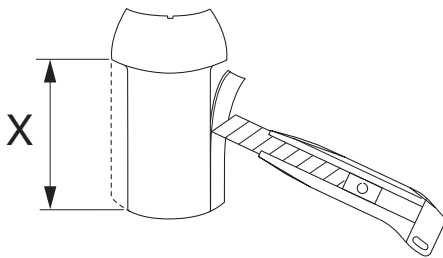

⑦

